

## C1 Cable (Generic / Canon)

**Canon EOS:** 1000D, 100D, 1100D, 300D, 350D, 400D, 450D, 500D, 550D, 600D, 60D, 650D, 60D, 700D, 760D, 70D, 80D

**Canon REBEL:** SL1, T1i, T2, T2i, T2ixt, T3, T3i, T4i, T5i, XT, XTi, XS, XSi, EKiss, Kiss F Digital, Kiss N, Kiss X2, Kiss X3, Kiss X4, Kiss X5, Kiss X50, Kiss X6, 350D, 1200D

**Canon PowerShot:** G10, G11, G12, G15, G16, G1 X, SX50 HS. FUJI: X-T1, X-E1, XE2, Finepix S1.

**Contax:** 645, N, N1, NX, N Digital

**Hasselblad:** H series

**Pentax:** K-3, K-5, K-5 II, K-5 IIs, K-7, K-m, K-10, K10D, K20D, K30, K50, K100D, K110D, K200, K200D, K-500, K2000, MZ-6, MZ,-L, ZX-L, x70, x90, \*ist, \*istD, \*istDL, \*istDL2, \*istDs, \*istDS2, 645D, 645Z.

**Samsung:** GX-1L, GX-1S, GX-10, GX-20, NX10, NX-11, NX100, NX5. SIGMA: SD1, SD9, SD10, SD14, SD15. HASSELBALD: H, H3D, H4D-200MS, H4D-31, H4D-40, H4D-50, H4D50MS, H4D-60

**Sigma:** SD1, SD9, SD10, SD14, SD15

**Fuji:** XT-2



### **C3 Cable (Canon)**

**Canon EOS:** 10D, 1D, 1D C, 1D Mark II, 1Ds Mark II, 1D Mark III, 1Ds Mark III, 1D Mark IV, 1D X, 1Ds, 1Ds Mark II, 1Ds Mark III, 5D, 5D Mark II, 5D Mark III, 5D Mark IV, 5D SR, 6D, 7D, 7D Mark II, 1V/1VHS, EOS-3, D30, D60, D2000, 10D, 20D, 20Da, 30D, 40D, 50D.

**Kodak:** DSC-530



## N1 Cable (Nikon, Fuji, Kodak)

**Nikon:** D1, D1H, D1X, D2, D2H, D2X, D2Xs, D2Hs, D200, D3, D3X, D3s, D4, D4s, D5, D200, D300, D300S, D500, D700, D800, D800 E, D810, F90x, F90, F100, F6, F5, N90s.

**FUJI:** S3 Pro, S5 Pro.

**KODAK:** DCS-14N



## N2 Cable (Nikon)

**Nikon:** D70s, D80



## N3 Cable (Nikon)

**Nikon:** D90, D600, D610, D750, D3100, D3200, D3300, D5000, D5100, D5200, D5300, D7000, D7100, D7200, P7800, Df



## P1 Cable (Panasonic)

**Panasonic:** DMC: GX5, GX1S, GX1XS, GH3, GH4, GH7, GX8, G1, GH1, G1A, G1R, G2, G2A, G2R, G10, GH2, GH2S, G3, GF1, G5, G6, G10, FZ15, FZ20, FZ50 series, FZ100, FZ150, FZ30 series, FZ20S, FZ200, FZ1000, Ft 2, TS2A, TS2D, TS2S, TS2Y, LC-1, L-1, L-10

**Leica:** DigiLux 2, DigiLux 3, V-Lux 1, V-Lux 2, V-Lux 3, and V-Lux 4



## P3 Cable (Olympus)

**Olympus:** E1, E3, E5, E10, E20, E30, E100, RS



## P12 Cable (Olympus)

**Olympus:** OM-D series, PEN series, E-P1, E-P2, E-P3, EP5, E-PL2, E-PL3, E-PL5, E-PM1, EPM2, XZ-1, XZ-2, XZ-2, iHS, E30, E300, E400, E410, E420, E450, E510, E520, E600, E620, SP-510 UZ, SP-550 UZ, SP-560 UZ, SP-570 UZ, SP-590 UZ, Evolt E-410, Evolt E-510



## S1 Cable (Sony, Minolta)

**Sony:** A100, A100k, A200, A300, A350, A400, A450, A500, A550, A550V, A560, A580, A700, A850, A900, SLT-A33, A35, A37, A55, A65, A65V, A57, A77, A99, Minolta: Dimage: A1, A2, 3, 4, 5, 7, 7I, 7HI, 9, A200 Maxxuum: 3, 4, 5D, 5xi, 7, 7D, 7xi, 9xi, 9, 500si, 505si, 600si, 700si, 800si, 807si, 5000, 7000, 9000 Dynax: 3, 4, 500si, 505si, 5D, 5000, 7, 7000, 7D, 9, 9000

**Hasselbald:** HV



## S2 Cable (Sony)

**Sony:** A58, NEX-3N, A7, A7R, A7S, A77II, A7r II, A3000, A6000, A6300, HX300, HX50V, RX10, RX100II, RX100III, 5000L

## F1 Cable (Fuji)

**Fuji:** Finepix X-A1, X-M1, X-T1, XQ1, S1 , X-E2S