

Here is the full list of compatible cameras:

CANON

EOS: 1000D, 100D, 1100D, 300D, 350D, 400D, 450D, 500D, 550D, 600D, 600 Da, 650D, 60D, 700D, 70D, 1200D

REBEL: SL1, T1i, T2, T2i, T2ixt, T3, T3i, T4i, T5i, XT, XTi, XS, XSi,

EKiss, Kiss F Digital, Kiss N, Kiss X2, Kiss X3, Kiss X4, Kiss X5, Kiss X50, Kiss X6,

PowerShot: G10, G11, G12, G15, G16, G1 X, SX50 HS,

EOS: 10D, 1D, 1D C, 1D Mark II, 1Ds Mark II, 1D Mark III, 1Ds Mark III, 1D Mark IV, 1D X, 1Ds, 1Ds Mark II, 1Ds Mark III, 5D, 5D Mark II, 5D Mark III, 6D, 7D, 7D Mark II, 1V/1VHS, EOS-3, D30, D60, D2000, 10D, 20D, 20Da, 30D, 40D, 50D,

NIKON

D1, D1H, D1X, D2, D2H, D2X, D2Xs, D2Hs, D200, D3, D3X, D3s, D4, D4s, D300, D300S, D700, D800, D800 E, D810, F90x, F90, F100, F6, F5, N90s

D70s, D80

D90, D600, D610, D750, D3100, D3200, D3300, D5000, D5100, D5200, D5300, D7000, D7100, P7800, Df

PANASONIC

DMC: GXS, GX1, GX1S, GX1XS, GH3, GH4, GH7, G1, GH1, G1A, G1R, G2, G2A, G2R, G10, GH2, GH2S, G3, GF1, G5, G6, G10, FZ15, FZ20, FZ50 series, FZ100, FZ150, FZ30 series, FZ20S, FZ200, FZ1000, Ft 2, TS2A, TS2D, TS2S, TS2Y, LC-1, L-1, L-10.

OLYMPUS

E1, E3, E5, E10, E20, E30, E100, RS

OM-D series, PEN series, E-P1, E-P2, E-P3, EP5, E-PL2, E-PL3, E-PL5, E-PM1, E-PM2, XZ-1, XZ-2, XZ-2, iHS, E30, E300, E400, E410, E420, E450, E510, E520, E600, E620, SP-510 UZ, SP-550 UZ, SP-560 UZ, SP-570 UZ, SP-590 UZ, Evolt E-410, Evolt E-510

SONY

A100, A100k, A200, A300, A350, A400, A450, A500, A550, A550V, A560, A580, A700, A850, A900, SLT-A33, A35, A37, A55, A65, A65V, A57, A77, A99

A58, NEX-3N, A7, A7R, A7S, A77II, A3000, A6000, HX300, HX50V, RX10, RX100II, RX100III, 5000L.

MINOLTA

Dimage: A1, A2, 3, 4, 5, 7, 7I, 7HI, 9, A200

Maxxuum: 3, 4, 5D, 5xi, 7, 7D, 7xi, 9xi, 9, 500si, 505si, 600si, 700si, 800si, 807si, 5000, 7000, 9000

Dynax: 3, 4, 500si, 505si, 5D, 5000, 7, 7000, 7D, 9, 9000

FUJI

X-E1, XE2

S3 Pro, S5 Pro

Finepix X-A1, X-M1, X-T1, XQ1, S1

CONTAX

645, N, N1, NX, N Digital

PENTAX

K-3, K-5, K-5 II, K-5 IIs, K-7, K-m, K-10, K10D, K20D, K30, K50, K100D, K110D, K200, K200D, K-500, K2000, MZ-6, MZ,-L, ZX-L, x70, x90, *ist,*istD, *istDL, *istDL2, *istDs, *istDS2, 645D, 645Z

SAMSUNG

GX-1L, GX-1S, GX-10, GX-20, NX10, NX-11, NX100, NX5

EX2F, Galaxy NX, NX1000, NX1100, NX20, NX2000, NX210, NX300, and NX Mini

SIGMA

SD1, SD9, SD10, SD14, SD15

KODAK

DSC-530, DCS-14N

LEICA

DigiLux 2, DigiLux 3, V-Lux 1, V-Lux 2, V-Lux 3, and V-Lux 4

HASSELBALD

H, H3D, H4D-200MS, H4D-31, H4D-40, H4D-50, H4D-50MS, H4D-60, HV